Instructions for product 1706:

- 1. Remove spike dust cover and insert spike into appropriate enteral feeding container.
- 2. Hang feeding container
- 3. Fill flush bag with desired amount of flush solution
- 4. Close and hang bag
- 5. Press Power button on control panel.
- 6. Open blue door enclosing feeding set loading area.
- 7. To load feeding set:
 - a. Grasp thumb tab on valve and insert retainer into left pocket
 - b. Grasp black retainer and gently stretch tubing around rotor and insert retainer into right pocket.
 - c. Press down on thumb tab to ensure valve is fully seated.
- 8. Close blue door
- 9. Follow screen prompts to prime the pump prior to connecting pump set to patient.
- 10. Proceed with feeding.