

Instructions:

1. Remove the temperature probe from the probe well. The monitor sounds a tone as it enters the ready state.
2. Insert the probe into a new probe cover and press the probe handle down firmly