STATLOCK[®] FOLEY STABILIZATION DEVICE

C. R. Bard, Inc. 8195 Industrial Blvd. Covington, GA 30014 Customer Service: 800.526.4455 Fax: 800.852.1339


Stabilization Device


StatLock

Designed to stabilize compatible urinary catheters

Application Technique



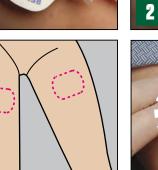

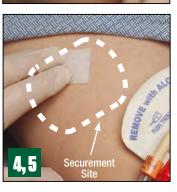



3



Prep

- 1. Place Foley catheter into retainer. Directional arrow should point towards catheter tip, and the balloon inflation arm should be next to the clamp hinge.
- 2. Close lid by placing your fingers under the pad and pressing the grip markers at the end of the clamp with your thumb, being careful to avoid pinching the catheter.
- 3. Identify proper securement site by gently laying the STATLOCK® Stabilization Device straight on the front of the thigh, then back up one inch towards the insertion site.* Make sure leg is fully extended.
 - Gently place the STATLOCK® Stabilization Device off to the side, away from the selected securement site.
- 4. Cleanse and degrease securement site with alcohol, or per hospital policy and procedure. Let skin dry. Be sure to clean area larger than securement site.
- 5. Apply skin protectant using both pads, in direction of hair growth, to area larger than securement site. Allow to dry completely (10-15 seconds).
- 6. Using permanent marker, write initials and date of application on STATLOCK[®] device anchor pad.

NOTE: Always secure catheter into the STATLOCK® Stabilization Device retainer BEFORE applying adhesive pad on skin.



Place and Peel

- 7. Align the STATLOCK[®] Stabilization Device over securement site leaving one inch of catheter slack between insertion site and the STATLOCK[®] device retainer.* Make sure leg is fully extended.
- 8. While holding the retainer to keep the pad in place, peel away paper backing, one side at a time, and place tension-free on skin.

Daily Maintenance

- 1. The STATLOCK® Stabilization Device should be assessed daily and changed when clinically indicated, at least every seven days.
- 2. If pad becomes soiled, wash with soap/water, saline or hydrogen peroxide. Do not use alcohol or prepackaged bathing systems, which could lead to early lifting.
- 3. If showering/bathing, cover with plastic wrap or waterproof dressing.
- 4. Conduct skin assessment prior to application and repeat daily per facility protocol.
- 5. Use clinical judgment on the removal of the STATLOCK® Stabilization Device if the patient experiences any fluid shifts that may interfere with skin integrity.

Removal Technique



Disengage






*For long-term male Foley catheter users, ideal location for stabilization is the abdomen to prevent meatal damage and erosion. STATLOCK® devices should be monitored daily and replaced when clinically indicated, at least every 7 days. Catheter insertion site should be treated per established hospital policy and procedure. STATLOCK® devices are contraindicated on patients with known tape or adhesive allergies. Please consult product inserts and labels for any indications, contraindications, hazards, warnings, cautions and directions for use.

STATLOCK[®] devices are sterile and latex-free.

Bard and StatLock are trademarks and/or registered trademarks of C.R. Bard, Inc.

©Copyright 2010 C.R. Bard, Inc. All rights reserved. 1404-06 R05/14 BG P06/14 2.5M



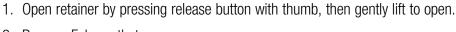

2. Remove Foley catheter.

Dissolve

3. Wipe the edge of the pad using at least 5-6 alcohol pads until a corner lifts. Then continue to stroke undersurface of pad in a back-and-forth motion by squeezing the alcohol out to dissolve the adhesive pad away from the skin.

www.bardmedical.com

BARD | MEDICAL